

TRIUMPH & LUCAS PART NUMBERS

05-21 Distributor Non-Exhaust Emission	Part No				
	Triumph	Lucas			
		1971	1972	1973	1987 Supersession
Distributor - to LF20000E	217435	41336A	41336A		
Distributor - from LF20000E	219089			41525A	
Distributor cap - to LF20000E	GDC117	54418661	54424083		DDB176
Distributor cap - from LF20000E	GDC138			54424083	DDB107
Brush & spring	519586	404435			404435W10
Brush & spring	519586		54423521	54423521	
Rotor arm - to LF20000E	GRA109	54421149	54422044		DRB113
Rotor arm - from LF20000E	GRA112			54422044	DRB113
Contact breaker points - single		54420850			DSB111
Contact breaker points - twin	GLS114	54422587	54422587	54422587	DSB112
Condenser	GSC107	54422586	54422586	54422586	DCB113
Base plate - upper	520128	54422584	54422584	54422584	
Base plate - lower	520127	54422617	54422617	54422617	
Cam	UKC1672	54421614	54421614		
Cam	UKC1672			54425878	
Spring set - auto advance	UKC1673	54419169	54419169		
Spring set - auto advance	UKC1673			54425877	
Weight	517177	54413922	54413922		Not Serviced
Weight	517177			54413073	Not Serviced
Shaft & action plate		54422810	54422810	54422810	
Vacuum unit - to LF20000E	519594	54421965	54421965		
Vacuum unit - from LF20000E	UKC1674			54425692	
Driving gear	519595	54421966	54421966		Not Serviced
O-ring	517913	54160267	54160267	54160267	
Low tension lead kit	521016			54958773	Not Serviced