

TRIUMPH & LUCAS PART NUMBERS

05-22 Distributor Exhaust Emission	Part No				
	Triumph	Lucas			
		1971	1972	1973	1987 Supersession
Distributor - to LF20000UE	218087	41337A	41384A		Not Serviced
Distributor - from LF20000UE	218977			41500A	
Distributor cap	521009	54418661			DDB176
Distributor cap	521009		54424083	54424083	DDB107
Brush & spring	521010	404435			
Brush & spring	521010		54423521	54423521	
Rotor arm	GRA112	54421149			DRB113
Rotor arm	GRA112		54422044	54422044	DRB113
Contact Breaker points - twin	GCS114	54422587	54422587	54422587	DSB112
Condenser	GSC107	54422586	54422586	54422586	DCB113
Base plate - upper	520128	54422584	54422584	54422584	
Base plate - lower	520127	54422617	54422617	54422617	
Cam - to LF20000UE	521012	54421614	54422426		
Cam - from LF20000UE	UKC1669			54425707	
Spring set - auto advance, to LF20000UE	521013	54419169	54419168		Not Serviced
Spring set - auto advance, from LF20000UE	UKC1670			54425705	
Weight	517177	54413922	54413922	54413922	Not Serviced
Shaft & action plate	520130	54422810	54422810	54422810	
Vacuum unit - to LF20000UE	521014	54422902	54424238		Not Serviced
Vacuum unit - from LF20000UE	520131			54424241	54424241
Driving gear	148868	54421966			Not Serviced
Driving gear	148868		54418944		
O-ring	517913	54160267	54160267	54160267	
Low tension lead kit	521016		54958773	54958773	Not Serviced