


# OVERDRIVE - Solenoid and Accumulator

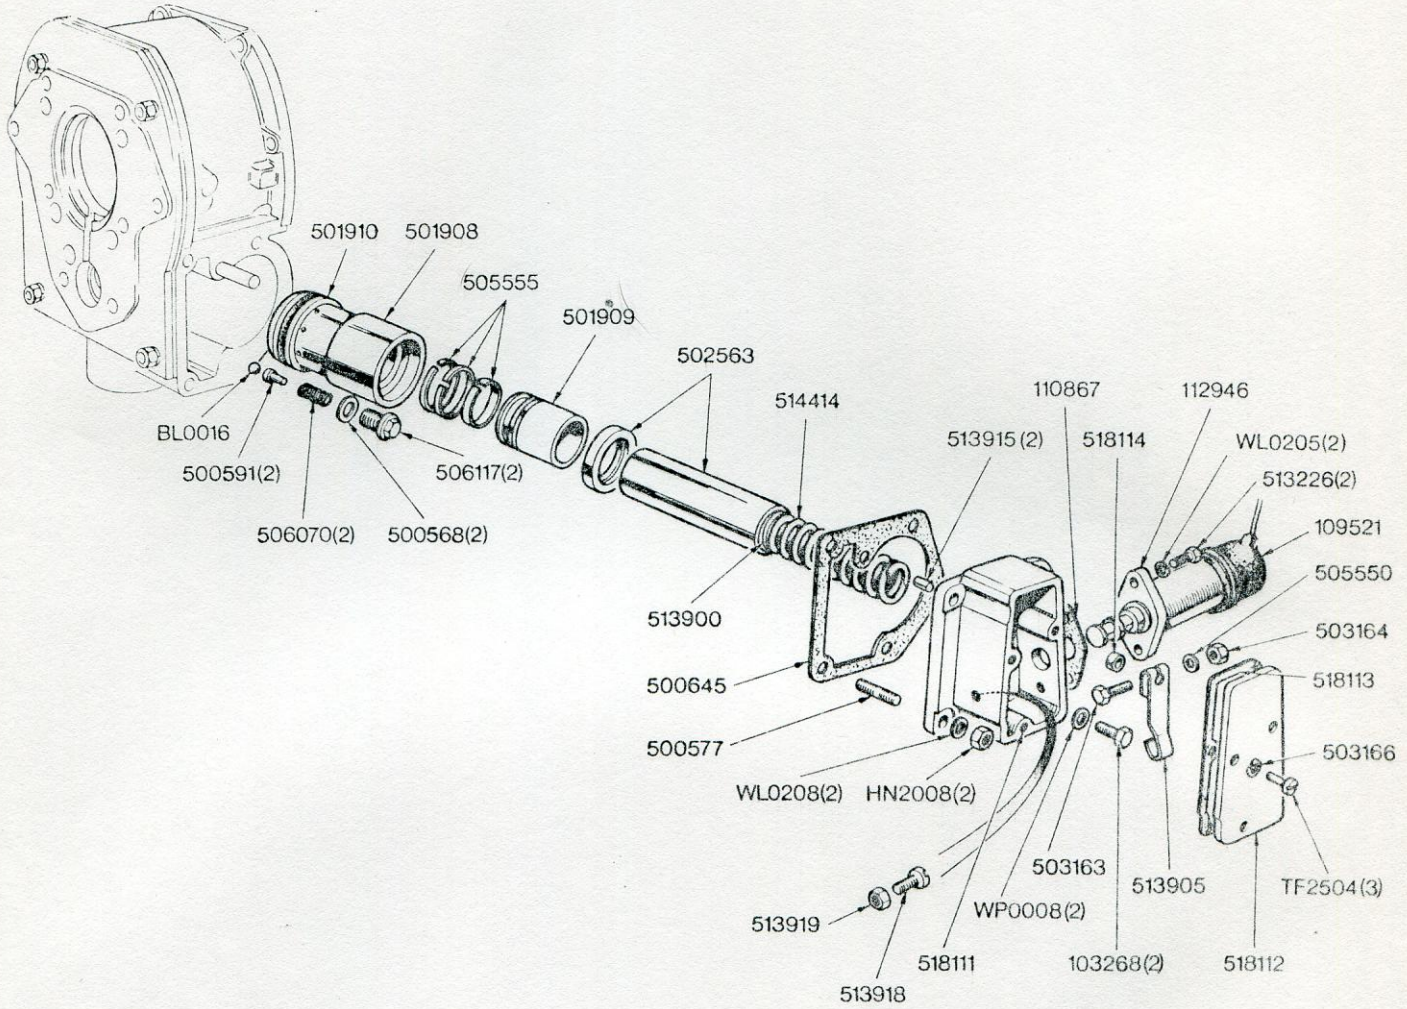

# OVERDRIVE

04-12 Solenoid and accumulator	Part No	
	Triumph	Rimmer Bros
Ball, steel	BL0016	BLS108
Plunger	500591	500591
Spring	506070	506070
Washer	500568	3H693
Plug	506117	268095
O-ring	501910	501910
Accumulator assembly housing	501908	501864
Piston ring set	505555	505555
Accumulator piston assembly	501909	501909
Assembly spacing tube	502563	502563
Accumulator spring	514414	518601
Washer, packing	513900	513900
Washer, joint	500645	500645
Dowel	513915	
Stud	500577	TE605111
Solenoid assembly bracket	518111	518111
Washer, lock	WL0208	GHF332
Nut - steel	HN2008	GHF201
Adjusting screw	513918	
Nut, lock	513919	
Washer	110867	7H8196
Distance collar	518114	502567
Solenoid	112946	109521
Washer, lock	WL0205	WL205
Setscrew	513226	HU504
Cover, rubber	109521	
Washer, plain	WP0008	GHF301
Bolt	503163	SH604091
Lever, actuating	513905	513905
Washer	505550	WP127
Nut	503164	503164
Setscrew	103268	103268
Cover plate	518112	518112
Cover plate joint washer	518113	518113
Washer	503166	503166
Cover plate screw	TF2504	PX505

