


# SUSPENSION

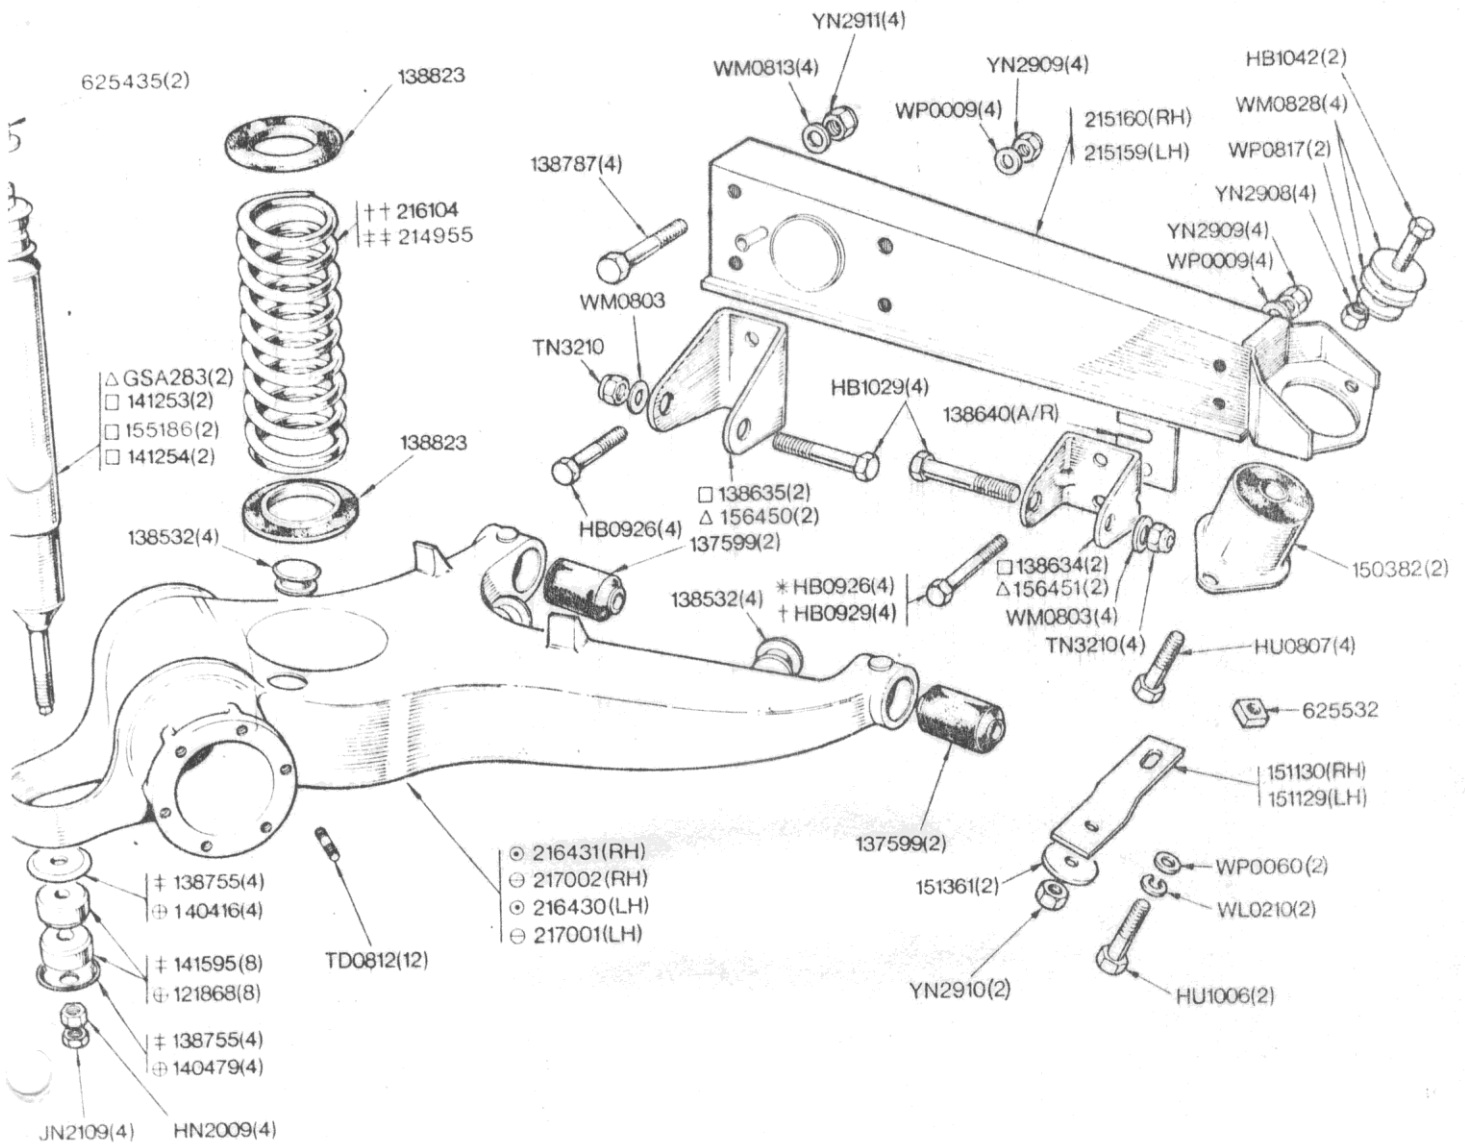

**NOTE**

Only required when one or no shims are fitted.  
 Only required when two to eight shims are fitted  
 Part No. 141253 is for Woodhead Munroe Shock Absorbers  
 Part No. 155186 is for Armstrong Shock Absorbers  
 Part No. 141254 is for Girling Shock Absorbers  
 Items marked thus are for Woodhead Munroe Shock Absorbers only  
 Items marked thus are for Armstrong or Girling Shock Absorbers only  
 Items marked thus are fitted up to Commission No LD24 only  
 Items marked thus are fitted from Commission No LD25 and future

□ Fitted up to Commission No only  
 △ Fitted from Commission No and future  
 Note:- If fitted in pairs 216104 may be used  
 for all replacements

## REAR SUSPENSION

02-48 Rear Suspension	Part No	
	Triumph	Rimmer Bros
Mounting bush - use with Armstrong or Girling damper	121868	
Trailing arm bush	137599	137599
Blanking plug	138532	138532
Outer mounting bracket - to commission no ?	138634	138634
Inner mounting bracket	138635	138635
Outer mounting bracket shim	138640	138640
Mounting washer - use with Woodhead Monroe damper	138755	
Bolt	138787	138787
Upper & lower insulation pad	138823	138823
Mounting washer - use with Armstrong or Girling damper	140416	
Mounting washer - use with Armstrong or Girling damper	140479	
Rear damper assembly - Woodhead Munroe, to commission no ?	141253	
Rear damper assembly - Girling, to commission no ?	141254	
Mounting bush - use with Woodhead Monroe damper	141595	
Mounting bush	150382	150382
Strap - LH	151129	151129
Strap - RH	151130	151130
Washer	151361	151361
Rear damper assembly - Armstrong, to commission no ?	155186	
Outer mounting bracket - from commission no ?	156451	
Road spring	214955	
Rear subframe assembly - LH	215159	215159
Rear subframe assembly - RH	215160	215160
Road spring	216104	216104
Trailing arm assembly - LH, to commission no LD24	216430	
Trailing arm assembly - RH, to commission no LD24	216431	
Trailing arm assembly - LH, from commission no LD25	217001	217001
Trailing arm assembly - RH, from commission no LD25	217002	217002
Cover	625435	625435
Nut	625532	625532
Rear damper assembly - from commission no ?	GSA283	
Bolt - required when one or no shims are fitted	HB0926	BH606261
Bolt - required when two to eight shims are fitted	HB0929	BH606321
Bolt	HB1029	BH607321
Bolt	HB1042	256077
Nut	HN2009	GHF202
Bolt - strap locating	HU1006	SH607061
Bolt	HU807	SH605071
Nut - jamming	JN2109	NT606041
Stud	TD0812	TD812
Nut - nyloc, thin	TN3210	GHF274
Washer - lock	WL0210	WL600071
Washer	WM0813	WC112081
Washer - lock	WM803	WC600071
Washer	WM828	WM828SS
Washer	WP0009	GHF302
Washer	WP0009	GHF302
Washer - plain	WP0060	WP60

## REAR SUSPENSION

02-48 Rear Suspension continued	Part No	
	Triumph	Rimmer Bros
Washer	WP817	WP817SS
Nut - nyloc	YN2908	
Nut - nyloc	YN2909	GHF223
Nut - nyloc	YN2910	GHF224
Nut - nyloc, thin	YN2911	GHF275
Rear damper assembly		GSA374
Mounting washer		140416
Mounting bush		152588