


BODY AND FITTINGS - Rear Bumper

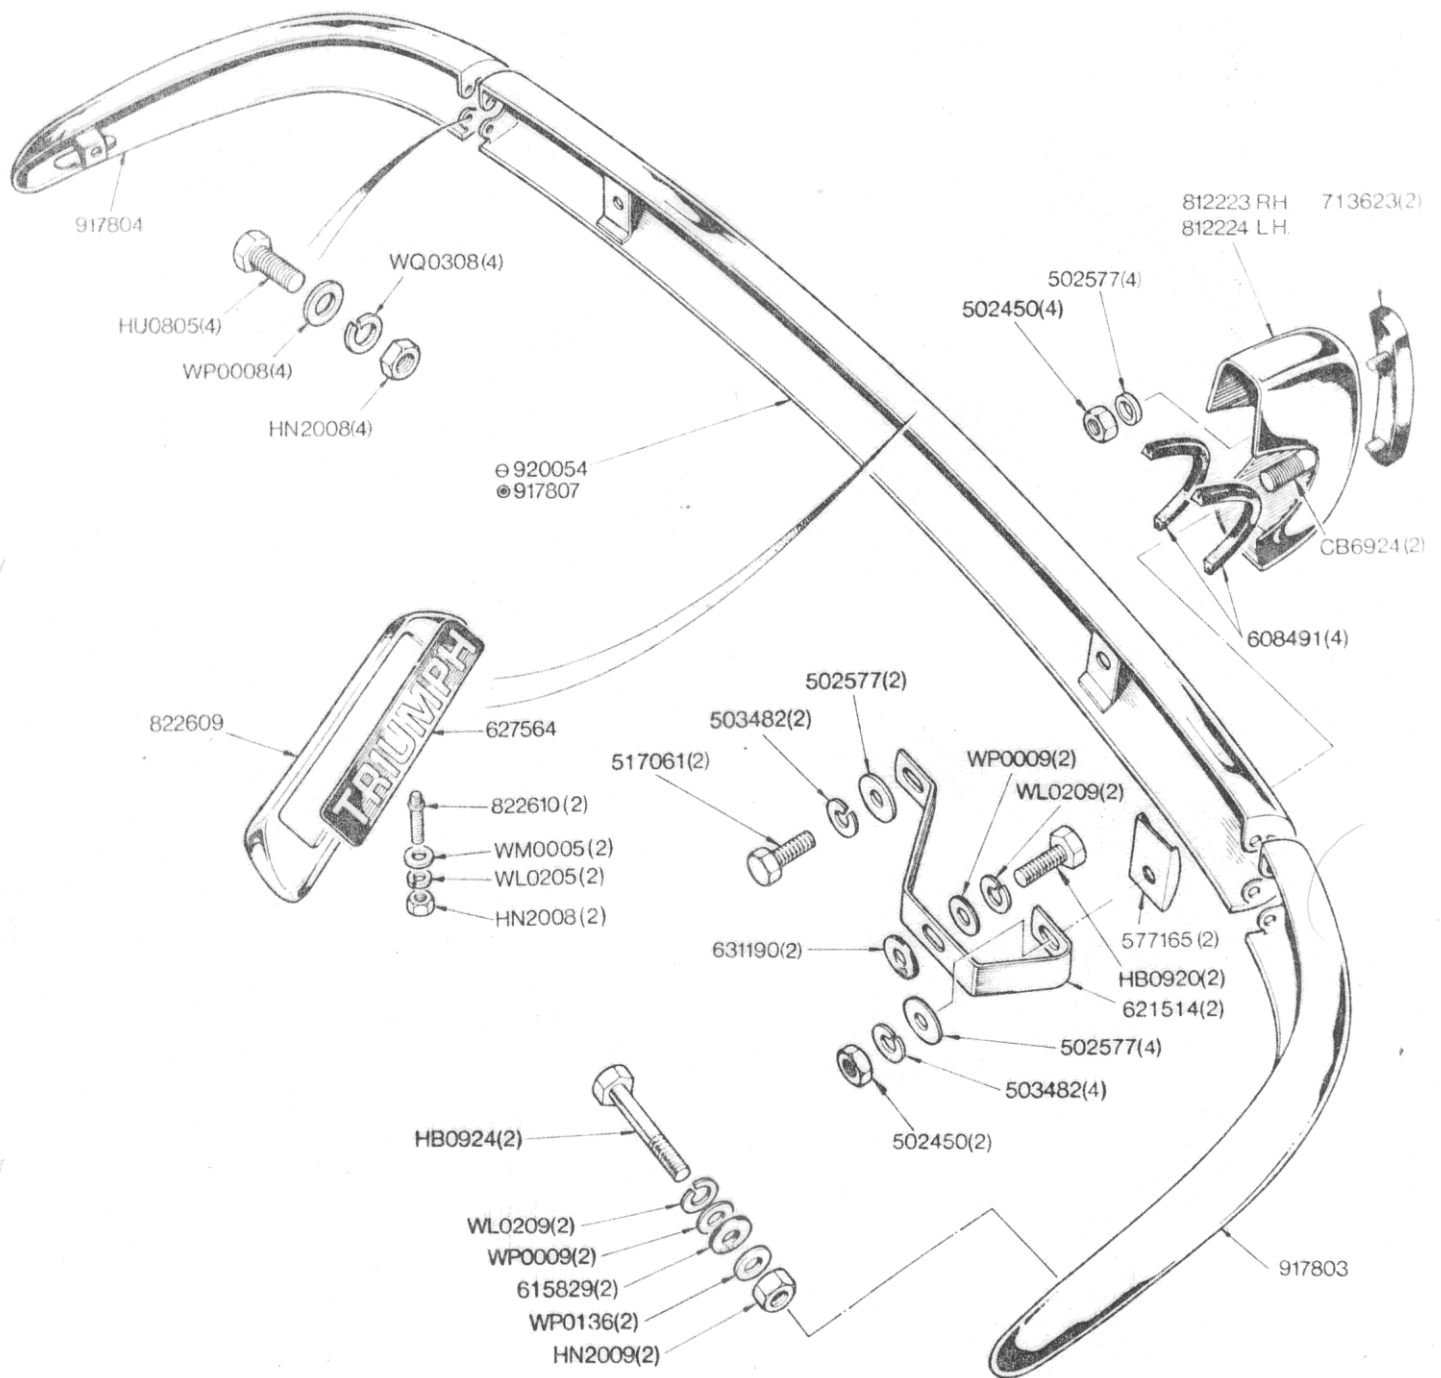

NOTE

631081 Plug 2 off Replaces Plinth German Markets.
 © Fitted up to Body No.T20,000LD only
 Ⓞ Fitted from Body No.T20,001LD and future

BODY & FITTINGS

03-57 Rear Bumper	Part No	
	Triumph	Rimmer Bros
Nut - overider	502450	GHF200
Nut - bumper bracket	502450	GHF213
Washer - plain	502577	GHF302
Washer plain	502577	WD110061
Lock washer	503482	GHF333
Bolt	517061	GHF105
Bumper spacer	577165	577165
Override seal	608491	608491
Washer - rubber	615829	GEX7300
Rear bumper bracket	621514	621514
Nameplate	627564	627564
Washer - rubber	631190	GEX7330
Override assembly buffer	713623	713623
Override shell - LH	812223	812223
Override shell - RH	812224	812224
Rear bumper plinth	822609	822609
Plinth stud	822610	822610
Rear bumper corner bar - LH	917803	917803
Rear bumper corner bar - RH	917804	917804
Rear bumper centre bar - to T2000LD	917807	917807
Rear bumper centre bar - from T2000LD	920054	920054
Bolt - carriage	CB6924	CB6924
Bolt	HB0920	BH606201
Bolt	HB0924	GHF126
Nut	HN2008	GHF201
Nut	HN2009	GHF202
Setscrew	HU0805	SH605051
Washer - lock	WL0205	WL205
Washer - lock	WL0209	GHF333
Washer - plain, medium	WM0005	GHF300
Washer - plain, light	WP0008	GHF301
Washer - plain, light	WP0009	GHF302
Washer - plain, light	WP0009	GHF302
Washer - plain, light	WP0136	WD110061
Washer - lock, square section	WQ0308	GHF332